

## FOR INFORMATION ONLY

### DISHWASHER ERROR CODE E1 - AQUASTOP ANTI FLOOD DEVICE

#### E1 – Aquastop intervention

This alarm is generated when the float switch of the anti-overflowing system is kept “closed” by the water in the tray. In this situation the drain pump is activated until the float switch returns to the “open” position.

This defect can be caused by, but not only, an internal leak or a defective float switch.

The aquastop is a component that controls the flow of water into the appliance and can stop the flow of water if a leak is detected. This minimises the risk of flooding from the appliance.

The aquastop is located at the rear of the appliance on the inlet water pipe and is sometimes referred to as an anti flood device or anti overflow system.



*Examples of aquastop hoses*