


Installation and Operating Instructions

Model:
PW-F7-W

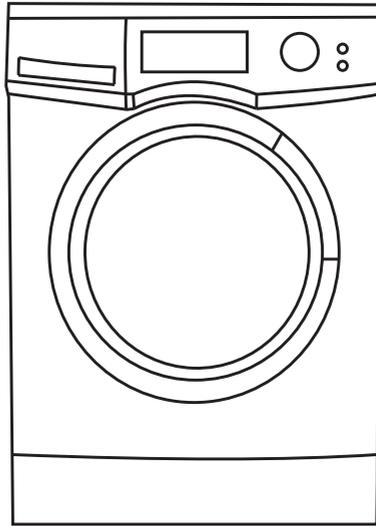

For your convenience, we recommend to
attach the serial number label HERE.



Dear Valued Customer,

Thank you and congratulations on purchasing your new Parmco appliance.

All Parmco products are made to the highest quality and design standards. We are sure you will enjoy your new appliance.


As a note, please read through these instructions carefully, as these will assist you in gaining a complete understanding of the functions and features offered by your appliance.

Please take special note of all detailed technical information and installation instructions. It is essential that you only allow a qualified technician to install this appliance to ensure the safety and reliability of this appliance.

Furthermore, not using appropriate personnel to install this appliance may affect any future warranty claims lodged, so please check with Parmco Appliances before any installation is carried out.

We hope you enjoy your new appliance. If you would like to find out more about this product or any other products in Parmco's extensive range, visit us on the web at www.parmco.co.nz.

Regards,
The Parmco Team

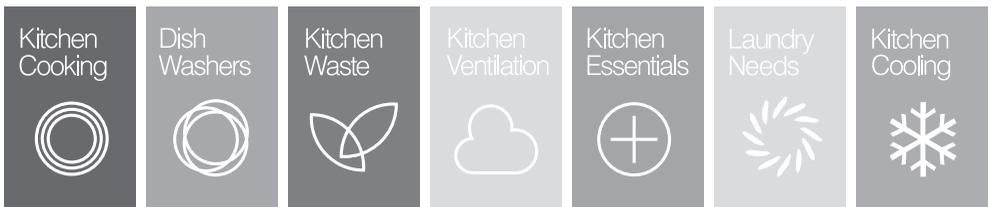

Contents

Important safety information	3
Safety precautions	4
Product description	5
Control Panel	6
Programmes table	8
Helpful hints and tips	9
First use	10
Personalisation	10
Daily use	11
Care and cleaning	13
Troubleshooting	16
Technical data	18
Installation	19
Electrical connection	20
Environmental concerns	21

IMPORTANT SAFETY INFORMATION

For best performance and to extend the life of your appliance we recommend that you read the instructions in this owner's manual thoroughly before using your new appliance. It will provide you with all the information you need to ensure its safe installation, proper use and maintenance. Retain this owners manual for future reference.

Parmco is not liable for any damages or injuries caused as a result of not following the installation instructions in this manual.

- This appliance is designed for non-commercial, domestic household use only and must not be altered in any way.
- This appliance must be installed by a qualified and registered professional only, and connected to the correct power supply, water supply and drain supply before use.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised so they do not play with the appliance.
- We recommend to check the drum before starting a wash cycle to make sure children or pets do not climb into the drum.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp items can cause extensive damage and must not be placed in the washing machine.
- Make sure you follow the supplier's recommended quantity of fabric detergent and softener to avoid damaging the clothes or overfilling the washer.
- Small clothing items such as socks, laces, etc are washed in a washing bag to avoid them slipping between the tub and the inner drum.
- Always unplug the appliance and turn off the water supply after use, and before starting cleaning or maintenance processes.
- Do not install the washer in places with high humidity as it may cause a short circuit or personal injuries.
- Before first use, check the appliance for any damage that may occur during transportation. If this is the case, make sure you contact Parmco and do not install a damaged appliance.
- If the appliance is delivered during the winter months when temperatures are under 0 degrees Celsius, store it at room temperature for 24 hours before using it for the first time.
- During high temperature washing cycles, the glass door may get hot. To prevent any injuries, make sure you do not touch it.
- Flammable fluids (dry-cleaning solvents, kerosene, gasoline etc) should not be used or stored near your washer or used in any washing cycles to avoid any hazards or personal injuries.
- Do not attempt to alter or repair this appliance as it may cause serious hazard, personal injuries and will void the warranty.

SAFETY PRECAUTIONS

Before first time use

- This appliance is heavy, so please take care when moving it.
- Packaging items such as plastic bags, polystyrene etc. that this appliance is delivered in are potentially dangerous, and therefore must be discarded properly .
- All other packaging items and transit bolts have to be removed before use to avoid serious damage to the appliance or personal injuries. Please refer to the relevant section of the manual for more information.

- After the appliance is installed by authorized personnel, make sure the inlet and drain hose are not pressed as well as the worktop not pressing the electrical supply cable against the wall.
- If the machine is placed on a carpeted floor, make sure the feet are adjusted in order to allow the air to circulate freely under the appliance.
- Ensure there the appliance is installed properly to avoid any water leakage from hoses and their connections after use.


Use

- This appliance is intended for non-commercial, domestic household use only and must not be altered and used for any purposes.
- Make sure you are using your washer for the clothes that are machine washable only and you follow the washing instructions on each garment label to avoid damaging them and obtain the best results.
- Do not overload the appliance to avoid product damage and delays in the washing time. Always consult the Washing Programme Table.
- Before washing it is recommended to ensure that all pockets are emptied and buttons and zips are fastened. It is not suitable to wash frayed and torn items, as well as treating stains such as paint, ink, rust before washing. We recommend to use a lingerie bag for all intimate wear items.
- Garments which have been in contact with volatile petrol or other inflammable items should not be machine washed as it may cause fire and damages to the appliance.
- Do not pull the power supply cable from the socket to avoid personal injuries and damages; you should hold the plug when unplugging it.
- Do not use this appliance if the power supply cable, control panel, the working surface or the base are damaged.

NOTE:

If this is the first front loading washing machine you have owned, the operating noises may be unfamiliar to you. For example on high speed spin you may hear a high pitched noise. This is normal. Loud water noises in the top of the washing machine are normal as detergent is dispensed into the machine.

Product description

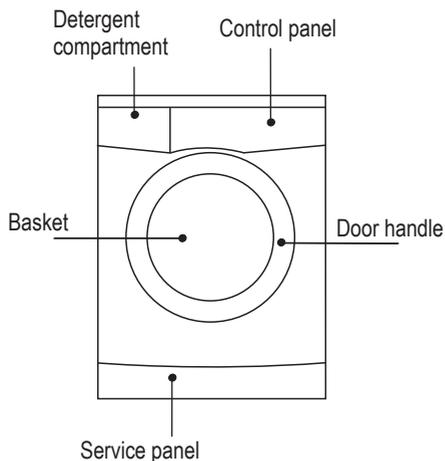


Quick Guide

1. Install the washing machine
2. Load the laundry
3. Measure out the detergent
4. Close the machine glass door
5. Put down (hang up) the drain pipe
6. Turn on the water tap
7. Plug the power supply
8. Select the desired programme
9. Press the [start/pause] key


Detergent dispenser drawer

- I Compartment for the detergent used for prewash and soak phase. The prewash and soak washing powder has to be added at the beginning of the washing programme.
- II Compartment for the powder or liquid detergent used for the main wash. If using liquid detergent pour it just before starting the programme.

 Compartment for the liquid additives (fabric softener). Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash programme.

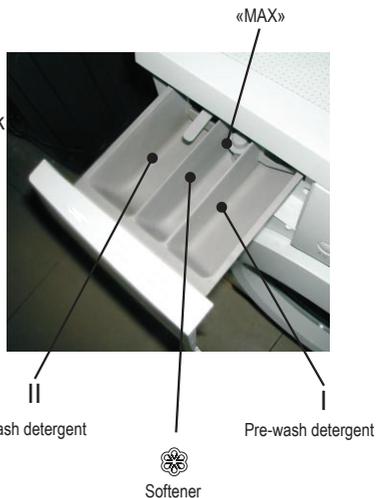

Control panel

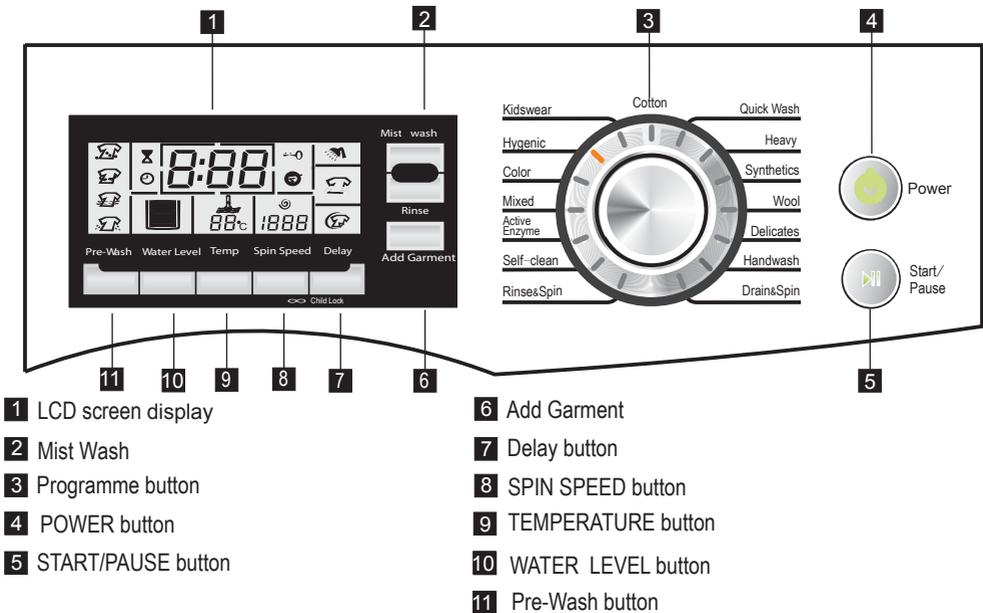

LCD screen display

- Only the light relevant to the cycle that is currently being carried out will remain lit during the washing program.
- The delay start light will flash to indicate the delay time. It will start the programme after **【xx】** hours.
- After the wash procedure begins, **【REMAIN】** will light up to display the time remaining on the cycle.
- When the child lock function is selected, **【CHILD LOCK】** will light up or appear on the display screen.
- When the door is at the lock state, **【DOOR LOCK】** will light up or appear on the display screen. The door can be opened only after the light has turned off.

Mist wash

- Helps to dissolve the detergent, leading to a more effective cleaning and rinsing process.

PROGRAMME selector button

- For your clothes to have a more efficient and clean wash, different wash cycles can be selected depending on your needs.

Power button

- <<Power>> button has the power function. By pressing this button the unit is powered on or off.

START/PAUSE button

- <<Start/Pause>> button, has the start and pause function. When this button is pressed, the washer switches between the start and pause functions.

ADD GARMENT button

<< Add garment>>. This operation can be executed during the washing procedure. While the washing machine basket is still rolling and a large amount of hot water is left in the basket, make sure you take extra care when performing this procedure. Do not force the door to open.

Press the << start/pause>> button, then <<add garment>> then follow these steps:

1. Wait until the basket stops rotating
2. The door is unlocked
3. After you finish adding the extra garments, close the door and press <<start/pause>> button.

DELAY button

This button is used for delaying the wash. The delay time can be set between 0-24 hours by pressing this key continuously. The delay time means the wash will begin in <<xx>> hours.

SPIN SPEED button

By pressing this button you can change the spin speed of the selected programme. It has to be set up before beginning the wash cycle.

TEMPERATURE button

By pressing this button you can adjust the temperature. You can select different water temperatures or cold water by pressing this button repeatedly.

WATER LEVEL button

You can select the water level for your wash according to the degree of dirt and clothes quantity.

CHILD LOCK

This is a child safety feature. To activate it, press button 7(Delay) and 8(Spin) for three seconds. Please note that this function also locks the Start/Pause button. Once this function is active a child head image will come up. To cancel the child lock function, you need to press again button 7(Delay) and 8(Spin) for three seconds.

Note:

When the child lock function is activated, turning the washing machine off and on will not cancel this function.

Programme table



Fabric Cycle	Maximum temperature (Centigrade)	Maximum spin speed (RPM)	The maximum washing capacity (kilogram)	Extra Rinse	Pre-Wash	Detergent box			Programme duration (hour/minutes)	Standard preselected washing programmes and type of clothes
						Pre-wash	Main wash	Softener		
Cotton	95	1200	7Kg	Optional	Optional	○	●	○	1:23	Cotton clothes. Standard preselected temperature is 60 degrees, spin 800RPM.
Quick	40	1200	3.5	Optional	Non-optional	×	●	○	0:24	Lightly soiled garments. Standard preselected temperature is 30 degrees, spin 800RPM.
Heavy	95	1200	7	Optional	Optional	○	●	○	3:24	Heavily soiled garments. Standard preselected temperature is 60 degrees, spin 1200RPM
Synthetics	60	800	3.5	Optional	Optional	○	●	○	0:59	Synthetic garments. Standard preselected temperature is 40 degrees, spin 800RPM.
Wool	40	800	3	Optional	Non-optional	×	●	○	0:45	Wool garments. Standard preselected temperature is 40 degrees, spin 600RPM.
Delicates	30	600	2.5	Optional	Non-optional	×	●	○	0:35	Silk, viscose, delicate clothes Standard preselected temperature is cold, no spin.
Handwash	95	—	7	Non-optional	Optional	○	●	×	0:34	Freshen up garments. Standard preselected temperature is cold, no spin.
Drain & Spin	—	1200	7	Non-optional	Non-optional	×	×	×	0:08	Spin and drain washed clothes. Standard preselected spin is 800 RPM.
Kidswear	60	1200	7	Optional	Optional	○	●	○	1:03	Children's clothes. Standard preselected temperature is 40 degrees, spin 800RPM.
Hygienic	95	1200	3.5	Optional	Optional	○	●	○	1:35	Personal, intimate clothes. Standard preselected temperature is 60 degrees, spin 800RPM.
Color	40	1200	3.5	Optional	Optional	○	●	○	0:53	Coloured clothes except wool and silk items. Standard preselected temperature is cold, spin 800RPM.
Mixed	60	1200	7	Optional	Optional	○	●	○	1:02	Mixed colour load. Standard preselected temperature is 40 degrees, spin 800RPM.
Active enzyme	60	1200	3.5	Optional	Must	●	●	○	1:54	Soiled garments. Standard preselected temperature is 60 degrees, spin 800RPM.
Self clean	95	600	—	Non-optional	Non-optional	×	●	×	0:57	No detergent
Rinse & Spin	—	1200	7	Optional	Non-optional	×	×	○	0:14	Standard preselected spin is 800RPM.

○ Indicates adding detergent or softener when needed.

● It means it is necessary to add detergent, to achieve a good washing result.

×

It means the detergent or the softener cannot be added.

△ The operation time of the wash machine will change with the variance of the water temperature, water level, clothes, inlet water pressure and drain state.

HINTS AND TIPS

Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

Before loading the laundry

Do not wash whites and coloured together to avoid colour stains on the white garments.
Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.
Treat persistent stains before washing.
Rub particularly soiled areas with a special detergent.
Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Quantity of detergent to be used:

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Follow the product manufactures' instructions on quantities to use.

Use less detergent if:

- you are washing a small load
- the laundry is lightly soiled
- large amounts of foam form during washing.
- do not use acetone on artificial silk.

NOTE: Use only detergents specifically designed for front loading washing machines.

Degrees of water hardness

Water hardness is classified in so-called «degrees» of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. If the water hardness degree is medium or high we suggest you use a water softener, following the manufactures instructions.

When the degree of hardness is soft, re-adjust the quantity of the detergent.

First Use

- Ensure that the electrical and water connections comply with the installation instructions.
- Remove any packaging from the drum.
- Run a cotton cycle at the highest temperature without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment and start the machine.

Personalization

Acoustic signals

The machine is provided with an acoustic device, which sounds in the following cases:

- at the end of the cycle
- if there is a fault.

It is not possible to deactivate the acoustic signal.

Child safety lock

This function allows you to leave the appliance unattended, not having to worry that children might be injured by or cause damage to the appliance. This function also remains enabled when the washing machine is not working.

You can activate it as follow:

1. Press button 4 (Power) to start the washing programme.
 2. Press button 7 (Delay) + button 8 (Spin) for three seconds to activate the safety device.
- Now, it will not be permitted to change any other programme or option.

IMPORTANT TO NOTE

Your new washing machine is designed to wash a maximum of 7kg of clothes, etc. This is a wet weight. Try weighting different loads of wet washing until you are familiar with how laundry items make up to 7kg.


Overloading the washing machine can cause poor wash results, unbalanced spinning, vibration and noise and can seriously damage your machine.

Example: 1 pair of jeans = 1 KG; 1 standard towel = 1 KG; 1 beach towel = 1.5 KG

These are approximate wet weights and are intended as a guide only to enable you not to overload your washing machine.

Daily Use

Load the laundry

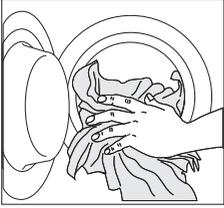

Open the door by carefully pulling the door handle outwards yourself. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.

Measure out the detergent and the fabric softener

Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment or in the appropriate compartment if the selected programme/option it requires (see more details in «Detergent dispenser drawer»).

If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

Select the required programme by turning the programme selector dial

Turn the programme selector dial to the required programme. The selector dial can be turned either clockwise or anticlockwise.

Press the Power button to reset the programme or to switch off the machine.

Important! If you turn the programme selector dial to another programme when the machine is working, the machine will not change to the newly selected programme.

Select the spin speed by pressing Spin Speed button

When selecting a programme, the appliance has a preselected spin speed setting for each different programme. (See «Washing programmes» for the maximum spin speed).

Press this button repeatedly to select your desired spin speed.
The relevant pilot light illuminates.

Select the available options by pressing Prewash button

By pressing this button you can select an additional Prewash function, additional Rinse or both.
When this button is pressed, the corresponding pilot light illuminates. When it is pressed again, the pilot light goes out.

Start the programme by pressing START/PAUSE button

To start the selected programme, press this button. The icon illuminates to indicate that the appliance starts operating and the door is locked. If you have chosen a delayed start, the machine will begin the countdown.

Select the Delay Start by pressing the Delay button

Before you start the programme, if you wish to delay the start, press this button to select the desired delay time. The selected delay time value will appear on the display for a few seconds, then the duration of the programme will appear again. By pressing this button, the washing programme can be delayed between 1 hour up to a maximum of 24 hours.

Select the delay start

1. Select the programme and the required options.
2. Select the delay start by pressing Delay button
3. Press Start button:
 - the machine starts its hourly countdown.
 - the programme will start after the selected delay has expired.

Cancelling the Delay Start after having started the programme:

1. Set the washing machine to PAUSE by pressing Start button
2. Press Delay button repeatedly until the display shows 0'.
3. Press button Start again to start the programme.

Important!

- The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing Start/Pause button and wait a few minutes before opening the door. After you have closed the door, press the same button again.

Altering an option or a running programme

It is possible to change some options before the programme carries them out. Before you make any changes, you must cancel the washing programme by pressing the Power button. Changing a running programme is possible only by resetting it. Press the Power button and then start the new programme by pressing the Power button again. The washing water in the tub will be emptied out.

Interrupting a programme

Press the Start /Pause button to interrupt a programme which is running.

Press the button again to restart the programme.

Cancelling a programme

Press the Power button to cancel a programme which is running, then wait a few minutes to open the door (it is possible only if there's no water in the tub).

At the end of the programme

The machine stops automatically. The blinking zero appears on the display. If a programme or an option that ends with water left in the tub has been selected, the door is locked to indicate that the water must be emptied out before opening the door.

Follow the below instructions to empty out the water:

1. Press the Power button.
2. Select the drain & spin programme.
3. Reduce the spin speed if needed, by pressing the relevant button.
4. Press Start/Pause button.

At the end of the programme, the door is released after a few minutes and can be opened. Press the Power button to switch off the machine.

Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

Stand-By:

1. Once the programme has finished, after a few minutes the energy saving system will be enabled. The brightness of the display and the indicator pilot lights are off.
2. If the appliance is switch on but in PAUSE mode, only the brightness of the display is off. By pressing any button the appliance will come out of the energy saving status.

Care and cleaning

⚠ Warning! You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

Descaling

It is a good idea to periodically use a water softening powder in the machine to prevent any water scaling deposits.


This should be done separately from any laundry washing, and according to the softening powder manufacturer's instructions.

External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly

Cleaning the dispenser drawer

The washing powder and additive dispenser drawer should be cleaned regularly.

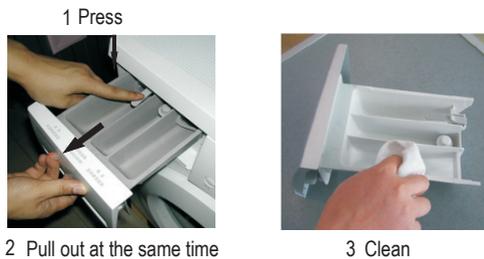


Flush it out under a tap, to remove any traces of accumulated detergent powder.

Cleaning the drawer recess

Having removed the drawer, use a small brush to clean the recess ensuring that all washing powder residue is removed from the upper and lower part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum.

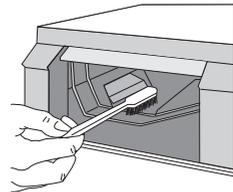

Regular cleaning in and around the rubber door seal is required. This will minimise the residue deposits from clothes washing.

Regular self-clean cycles should be run to remove residue.

HINT: Leaving the door and detergent dispenser slightly ajar when not in use will reduce the possibility for odours to develop.

Cleaning of the filter of the drainage pump

If the washing machine doesn't function properly or the filter net of the drainage pump cannot be cleaned, please follow the methods below

- 1 Close the water tap
- 2 Disconnect the power plug
- 3 If necessary, wait until the water has cooled down
- 4 Empty the water from the pump to a container cautiously .
- 5 Screw the pump cover out and clean the filter
- 6 Install the pump cover



Pump cover

Please clean the drainage pump regularly to prevent the sundries blocking the drainage pipe.

If the machine needs emergency drainage

If the machine needs emergency drainage, please follow the methods below when the machine cannot work normally :

- 1 Rotate the programme selector dial to OFF(stop) position and to close the water tap.
- 2 If necessary, wait until the water has cooled down.
- 3 Place a container on the floor, pull out the emergency emptying hose, place it into the container. Remove its cap and wait until the remaining water naturally flows out.



Open the filter's door



Turn the emergency drain hose cap



Pull out the emergency emptying hose



Remove the cap

Emergency drainage pipe

Drainage pipe ferrule

If the machine doesn't have Emergency drainage, please follow the methods[1] above .

Cleaning of the inlet water valve

If the inlet water time is found to be too long, please clean the filter net of the inlet valve.



- 1 Screw the inlet water pipe out.
- 2 Clean the gauze filter with a small soft bristle brush.

Warning!

When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

If you wash rugs, it is compulsory to inspect and clean the filter.


Cleaning the water inlet filters

Important!



If the appliance doesn't fill, takes a long time to fill with water, the start button blinks yellow or the display (if available) shows the relevant alarm (see chapter «What to do if...» for more details), check if the water inlet filters are blocked.

To clean the water inlet filters:

- Turn off the water tap.
- Unscrew the hose from the tap.
- Clean the filter in the hose with a stiff brush.
- Screw the hose back onto the tap. Make sure the connection is tight.

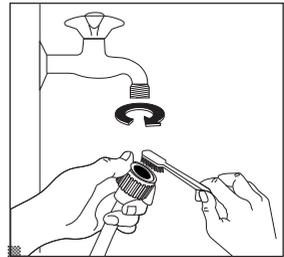

- Unscrew the hose from the machine. Keep a rag nearby because some water may flow.
- Clean the filter in the valve with a stiff brush or with the piece of cloth.

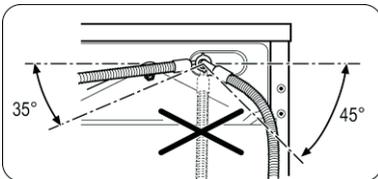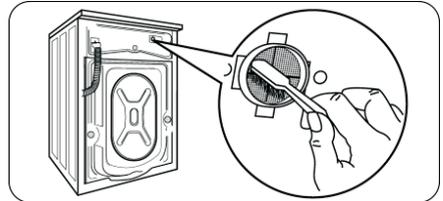

- Screw the hose back to the machine and make sure the connection is tight.
- Turn on the water tap.

Frost precaution or emergency emptied out

If the machine is exposed to temperatures below 0°C or if the water is not discharged, proceed as follows.

- 1 Pull out the plug from the power socket.
- 2 Turn off the water tap.
- 3 Unscrew the inlet hose.
- 4 Place a bowl on the floor and place the end of the inlet and drain hoses into it. The water should drain by gravity into the bowl.

Troubleshooting

Certain problems are due to a lack of simple maintenance or oversights, which can be solved easily without calling for service.

Before contacting Parmco for service please carry out the checks listed below.

Malfunction	Possible Cause / Solution
<p>The washing machine does not work</p> <p>Water leakage</p> <p>The spin of the clothes is abnormal</p>	<ul style="list-style-type: none"> • Close the washing machine's door. • Press the <<Start/Pause >>button. • Correctly connect the inlet water pipe. • Reload and distribute the laundry evenly in the drum.
<p>There is the peculiar smell in the washing machine</p>	<ul style="list-style-type: none"> • Run a Self-clean cycle without any clothes.
<p>No water is visible in the drum</p> <p>There is remaining water in the softener's box</p> <p>The remaining detergent is left on the clothes</p>	<ul style="list-style-type: none"> • No fault-water is under the visible area. • No fault - the effect of the softener will not be affected. <p>The water-fast component of non-phosphorus detergent can be left on the clothes to form into spots.</p> <ul style="list-style-type: none"> • Please select «Rinse&Spin» programme. • or brush away the fleck after the clothes have dried.
<p>The washing machine does not fill</p>	<ul style="list-style-type: none"> • Turn on the water tap. • Check the selection of the wash programme. • Check if the water pressure is sufficient. • Reconnect the water inlet pipe. • Close the washing machine's door. • Check if the inlet water pipe is bent or blocked.
<p>The washing machine fills and drains at the same time.</p>	<ul style="list-style-type: none"> • Make sure the end of the drainage pipe is higher than the water level inside the machine . • Check if the drainage pipe and waste have been sealed.
<p>The washing machine does not drain</p>	<ul style="list-style-type: none"> • Check if the drainage pumps is blocked. • Check if the drainage pipe is bent or blocked. • Check the height of the drainage nozzle, make sure it is 0.6-1 meter high from the bottom of the washing machine.
<p>Vibration of the washing machine</p>	<ul style="list-style-type: none"> • Level the washing machine. • Fasten the foot • Check if all the delivery bolts have all been removed.


Malfunction	Possible Cause / Solution
Foam spills from the detergent drawer	<ul style="list-style-type: none"> • Check if the amount of detergent is excessive, or if it is the suitable detergent for the front loader washing machine. • Dip one scoop of the softener mixed with 1/2 liter of water to the detergent box II. • Reduce the amount of detergent used next time.
The machine stops when the procedure has not been finished	<ul style="list-style-type: none"> • Power failure or water cut.
The drainage pump is noisy during operation after the water has been drained.	<ul style="list-style-type: none"> • The water inside the inner barrel has been drained but there is still a small amount of water in the drainage pump and pipe. The drainage pump continuously work and takes in the air, then there will be noise which is normal situation.
The machine stops for some time during the wash procedure.	<ul style="list-style-type: none"> • The washing machine adds water automatically. • There is too much foam in the tube, and the foam is being drained.

Alarm codes


⚠ If the washing machine cannot work normally, an alarm code will appear on the display. Please carry out the following checks.

Display	Reason	Solutions
	Inlet water overtime	Open the water tap, to check if the inlet hose is squashed or kinked, check if the filter in the inlet valve is blocked or not; check if the water pressure is too low.
	Overtime of the drainage	Check if the drain pump is blocked (see page 14).
	The door has not been closed	Check if the door of the washing machine is closed. Check if the clothes are trapped by the door seal.
	Others	Try again or contact your local service center if the problem persists.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine. The Service Centre will require this information.

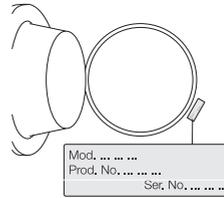

Technical data

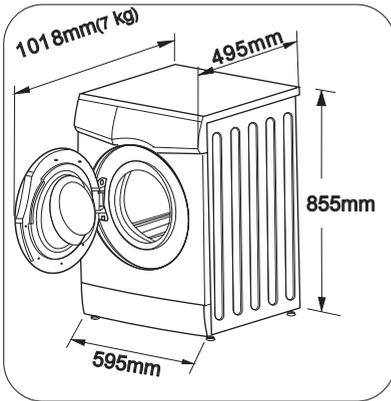

Rated Mains	220-240 V ~ / 50Hz
Wash power	200W
Spin power	450W
Heat power	2000W
Max. Power	2200W
Water pressure	0.02MPa~1MPa
Net weight	75Kg
Drain method	Upper drain
Spin method	Centrifugal
Washing capacity	7Kg
Max RPM	1200RPM
Drain Method	Upper Drainage

Installation


Unpacking the washing machine

Unpack your washing machine and check if there is any damage during the transportation. The packaging materials of the washing machine can be dangerous, especially to children. To avoid any personal hazards, please dispose of the packaging items properly and accord to the relevant local regulations.

VERY IMPORTANT: Removing transportation bolts

Before using this washing machine, transport bolts must be removed from the backside of this machine. Please take the following steps to remove the bolts:

1. Loosen all bolts with spanner and then remove them
2. Stop the holes with transport hole plugs
3. Keep the transport bolts properly for future use

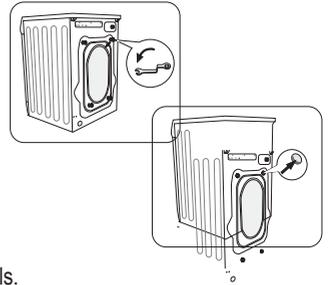


Positioning

Please install the washing machine on solid and flat ground.

Do not place the washing machine on cardboard, wood or similar materials.

Do not install the washing machine outdoors, or in humid areas to prevent damage .

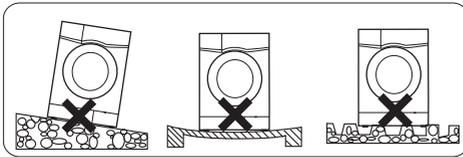


Ensure the washing machine is levelled.

Incorrectly levelling the washing machine can produce vibration.

It is important to secure the locking nut on the feet to ensure the unit remains levelled.

Connecting the inlet hose


Connect the inlet hose as indicated in the figure

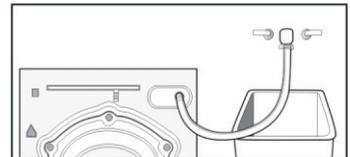



Inlet Hose Installation



- Take out the attached inlet hose.

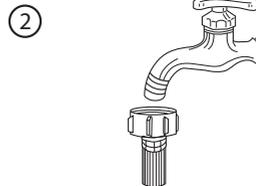

- Approach vertically one end of the inlet hose to the tap.

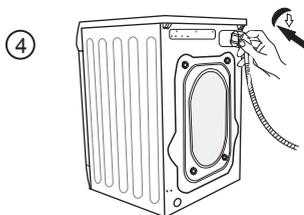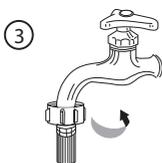

- Screw tight the tap in the direction of screw thread of the inlet hose.

- Connect the hose to the water inlet at the back of the washing machine.




- ☞ When connecting the water hose and the water tap, do not crossthread the screw.
- ☞ When connecting the screw thread of the inlet hose and the inlet valve, do not crossthread the screw or it may wear or leak.
- ☞ To avoid the damage caused by the overbending of the inlet hose .
- ☞ Please check the inlet hose conditions regularly. Please replace it in time if damaged.

Water drainage

The end of the drain hose can be positioned in three ways:

1. In a sink drain pipe branch


This branch must be above the trap so that the bend is at least 60 cm above the ground.

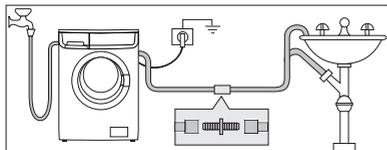

- 2. Directly into a drain pipe** at a height of not less than 60 cm and not more than 90 cm. The end of the drain hose must always be ventilated , i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. The drain hose must not be kinked.

Notes:

If the machine has the plastic hose , please install it with the following method:

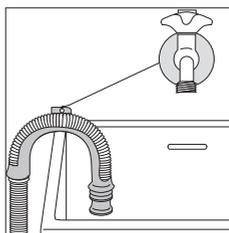

- 3. Hooked over the edge of a sink** using the plastic hose guide supplied with the machine.

In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by

attaching it to the wall or laundry tub.

- Drain hose must be fixed in all positions to avoid accidental spills.

Electrical connection

Information on the electrical connection is given on the rating plate on the inner edge of the appliance door. Check that your electrical installation complies with the maximum load required, also taking into consideration any other appliances in use.

- ⚠ **Caution!** Connect the machine to an earthed socket.
- ⚠ **Caution!** The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.
- ⚠ **Caution!** Should the appliance power supply cable need to be replaced, this **MUST** be carried out by an authorized electrician.
- ⚠ The power supply cable must be easily accessible after installing the washing machine.

Environmental concerns

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials marked with the symbol are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene

>PAP<=paper

Wash care symbols

The label and sign on the fabric can help you to choose the best way to launder your clothes.

<p>Normal wash</p>  <p>Gentle wash</p>	 <p>Warm wash (max 40°C)</p>	<p>Hand wash</p>  <p>Do not wash</p>	<p>Bleach</p>  <p>Do not bleach</p>	<p>Chlorine bleach may be used</p>  <p>Do not tumble dry</p>	 <p>Tumble dry. Medium (max 150°C)</p> <p>Tumble dry. Low heat (max 110°C)</p>
---	---	---	--	---	---

<p>Iron</p>  <p>Do not iron</p>	<p>Cool iron(max 110°C)</p>  <p>Warm iron,medium (max 150°C)</p>	<p>Dry clean</p>  <p>Do not dry clean</p>	<p>Dry clean normal cycle with any solvent</p>  <p>Dry clean normal cycle petroleum solvent only</p>	<p>Tumble dry normal</p>  <p>Dry flat</p>	<p>Drip dry</p>  <p>Line dry / hang to dry</p>
---	--	---	--	---	--



p: 09 573 5678
 f: 09 573 5699
 e: sales@parmco.co.nz
 w: www.parmco.co.nz



Parmco Appliances

2 year warranty



The Warranty:

- Subject to the terms and conditions contained within this warranty, if the product is not of Acceptable Quality (as defined in the Consumer Guarantees Act) within 2 years of the date of original purchase, then Parmco Sales undertakes to repair or, at its sole discretion, replace the product.
- The warranty does not cover the costs of transport, mileage or travelling time if the product is located beyond 30km of a recognised Service Agent.
- This warranty is offered as an extra benefit, and does not affect other legal rights, which can not be modified or excluded by agreement.
- This warranty only applies to goods supplied and installed in the North and South Islands of New Zealand.
- The provisions of this warranty are in addition to the rights and remedies available to consumers under the Consumer Guarantees Act 1993.

The Warranty is not valid:

- If the product is not installed and operated in accordance with the operating instructions.
- If the product is not installed to comply with the electrical, gas, plumbing and other Regulations and Codes of Practice in New Zealand.
- If the product is operated on voltages or frequencies outside the normal range for domestic appliances in New Zealand.
- If the product is not used in normal domestic use, or if it is used in a business as defined in the Consumer Guarantees Act.
- If any serial number has been removed or defaced.
- If proof of date of purchase is not supplied, except at the sole discretion of Parmco Sales. Proof of purchase can be for the product itself, or if installed with a kitchen or house then proof of purchase can be from a Parmco reseller of products supplied by Parmco.

Liability under this warranty will not be accepted for:

- Wear and tear from normal domestic use.
- Damage in transport.
- Damage caused to the product by neglect, abuse, negligence, wilful act or misuse.
- Any defect caused by accident, misuse, neglect, tampering with or unauthorised modifications of the appliance or any attempt at internal adjustment or repair by any person other than an Authorised Service Agent.
- Service calls that relate principally to the following:
 - Instruction on how to use the product.
 - Repair or replacement of house fuses, electrical wiring, gas fitting or plumbing.
- Wear and tear caused by normal use of the product.
- Normal or scheduled maintenance including blocked filters or ducting.
- Consumable items such as light bulbs.
- Any damage to ceramic glass hobs caused by spills when cooking.
- Any breakage or damage of glass items.
- Any damage caused by non recommended product used for cleaning, maintaining, lubricating or similar.
- Any aspect relating to the installation of the product, or damage caused during installation.
- Any third party (including reseller) or consequential loss or damage (direct or indirect) however arising.

Product _____ Date of purchase _____

Dealer / Retailers Name _____

Please retain this Warranty card together with receipt or other proof of purchase date when seeking service during the warranty period

Please contact Parmco at 09 573 5678 if your appliance needs servicing under warranty. Please have your model number and proof of purchase ready. Warranty repairs must be authorized by Parmco.